

ridesafer®



Vera Fullaway, CPSTI, Global Brand Representative



Children ages 4+ had few options in the rear center seat.



TABLE FOR S5.3.2

Type of add-on child restraint system	Means of installation				
	Type 1 seat belt assembly	Type 1 seat belt assembly plus a tether anchorage, if needed	Child restraint anchorage system (effective September 1, 2002)	Type II seat belt assembly	Seat back mount
Harnesses labeled per S5.3.1(b)(1) through S5.3.1(b)(3) and Figure 12					X
Other harnesses		X			
Car beds	X				
Rear-facing restraints	X		X		
Belt-positioning seats				X	
All other child restraints	X	X	X		



Gen4 ridesafer[®] delight



Safe Traffic System Inc. 10201 Pacific Ave., Franklin Park, IL 60131 U.S.A. www.safetrafficsystem.com



Introducing **Gen5** ridesafer[®] delight

WORLD-CLASS TESTING

USA STS only chooses **world renowned test facilities**



- NAWC Navel Air Warfare Center
- DRDC Defense R&D Canada
- KCL Korea Conformity Laboratories
- FITI Testing & Research Institute
- IMMI Industry leader in D&T
- SGS Leading test & certification
- CAPE Center for Advanced Product Eval
- MGA MGA Research Corporation
- CCAP China Cert Centre Auto Products















When used with a lap and shoulder belt, the Ride Safer Vest acts as a belt positioning system.




ridesafer®

A tether that attaches to reinforced loops on both shoulders and a crotch strap are provided with each vest.

The **tether** provides additional pre-crash positioning and added support during non-frontal collisions.

The **crotch strap** provides the anti-submarining feature.

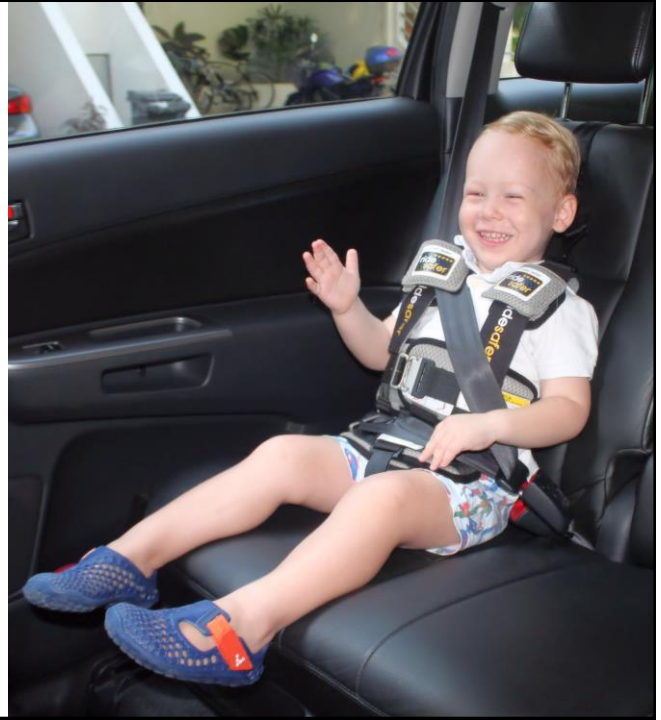

Enhanced Energy Absorption


The padding that is on the shoulders and front of the waist band absorbs and dissipates the energies of the crash. It prevents clavicle and intraabdominal injuries that are caused by the seat belt.



travel**smarter** ridesafer®



Tether Attachment

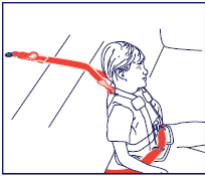

When used with a lap only seatbelt, the tether must be used.

30-60 lbs. requires only the single tether.

60-110 lbs. requires the dual tether with a lap only seat belt.



When used with a lap and shoulder belt, the single tether may be used for all 3 sizes 30-110 lbs.

Reinforced Fabric Loops

Are the attachment point for the top tether.



travel**smarter** ride**safer**




Deformable Metal Seat Belt Guides

For secure placement of seat belt.

Shoulder belt guide



Shoulder Belt Routing

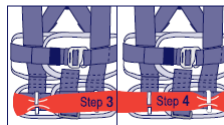

Lap Belt Routing



travel**smarter** ride**safer**



Adjustable Shoulder Belt Guides

For correct shoulder belt placement.




travelsmarter ridesafer



Aircraft Grade Metal Hook Locking System



Push the fastening hook against the loop and rotate slightly then pull upward to remove the arm of the hook from the loop.



Lift the fastening hook through the loop to remove.



travelsmarter ridesafer



Adjustable Shoulder Strap Length



The shoulder strap length can be adjusted on the back of the vest.




travelsmarter ridesafer



Neck Pillow for more Comfort



The neck pillow is optional for daily use.

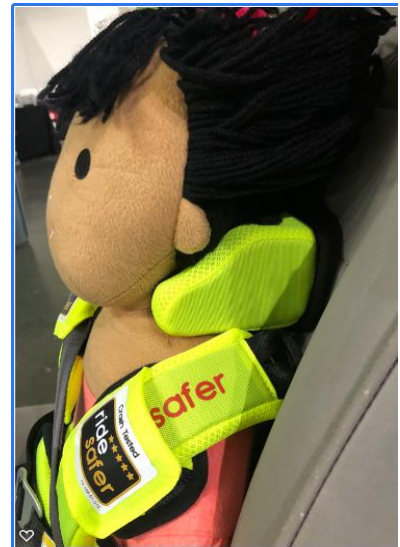


travelsmarter ridesafer





The vest
can be put
on outside
of the
vehicle.

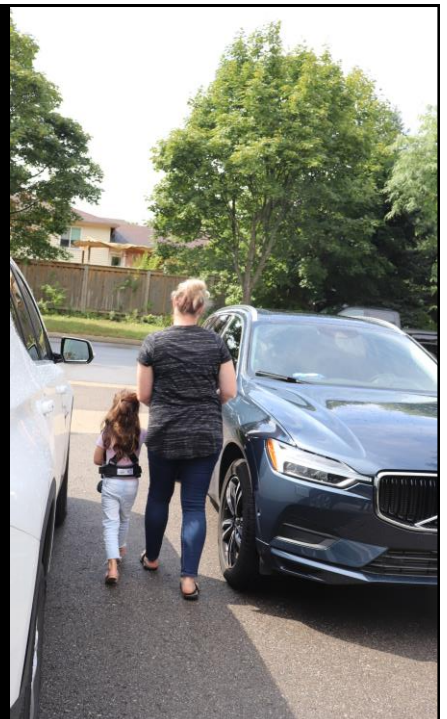

Ride shares
and
taxi rides
made
quicker,
easier and
comfier.



As easy as 1 – 2 – 3



1. Buckle.



2. Belt through guides.



3. Enjoy the ride!



travelsmarter ridesafer



FAQ: How can I fit 3 kids in car seats next to each other in a small car?



Gen5 Specifications	SMALL Vest	LARGE Vest	EXTRA LARGE Vest
Weight Range:	30 – 60 lbs.	50-80 lbs.	80 – 110 lbs.
Ships with:	Single Tether Crotch Strap Neck Pillow Zip Pack	Single Tether (Dual Tether available separately) Crotch Strap Neck Pillow Zip Pack	Dual Tether Neck Pillow Crotch Strap Zip Pack



travelsmarter ridesafer



travelsmarter



ridesafer®



Vera Fullaway, CPSTI
Global Brand Representative
vera@safetrafficsystem.com

